

Vigilant Wall Mounted Humidor Owner's Manual



Sentinel 250 Wall Mounted Humidor

Vigilant Sentinel 250 Wall Humidor

Owner's Manual

Congratulations on your Sentinel 250 Wall Humidor! Your Wall Humidor will not only protect your investment in cigars, it will season and maintain them in perfect condition for years to come. In fact, the quality of this handcrafted piece and its state-of-the-art electronic climate control system will be enjoyed for generations. Please read this entire manual before plugging in and operating your cigar cabinet. By following these instructions, you will not only ensure the proper operation of your Wall Humidor, you will be guaranteeing the preservation of your collection of fine cigars.

If you have any questions regarding the operation, and maintenance of your cigar cabinet please contact us at 1-888-812-4427. We are committed to your complete satisfaction.

Table of Contents:

| Parts Supplied | 3 |
|---------------------------------------|----|
| | |
| Unpacking Your Cigar Cabinet | 3 |
| nstallation Instructions | |
| Setting-up Your Humidification System | |
| Operating Your Sentry System | |
| Operating Your Guardian System | 11 |
| LED Lighting | 12 |
| Maintenance | 12 |
| Seasoning Your Wall Humidor | 13 |
| Cleaning the Reservoir and Wick | 13 |
| Troubleshooting | 14 |
| Guarantee | |

Parts Supplied

- Humidification Reservoir
- Humidification Wicking Filter
- (4) Spanish Cedar shelves with clear fronts
- Keys (2)
- Accessories Order Form
- (2) Z-clips
- (4) Toggle wall anchors (comes with screws)

Tools & Materials Needed

- Drill/drill bits
- Tape measure
- Screw driver
- Stud finder
- Level
- #8 Screws (used if stud present)
- Wire cover (optional)

Save all packing materials and sales receipt. Vigilant products should only be returned in their original packaging.

IMPORTANT!

DO NOT PLUG IN YOUR VIGILANT ELECTRONIC CIGAR CABINET UNTIL ALL PACKING MATERIALS HAVE BEEN REMOVED AND YOU HAVE CAREFULLY READ THESE INSTRUCTIONS.

Unpacking Your Cigar Cabinet

1. When your humidor arrives, it is important to inspect the shipment for any visible damage. We take great pride when packaging our products, however, shipping damage that's out of our control can happen.

ANY ITEMS THAT APPEAR DAMAGED SHOULD BE REPORTED TO VIGILANT WITHIN 7 DAYS OF DELIVERY OR THE DAMAGE CLAIM CANNOT BE HONORED To report any damage, please contact us at (888) 812-4427

- 2. Find a suitable location for your Wall Humidor away from temperature extremes within a room. While the cabinet will easily control the interior climate in a wide range of exterior conditions, it is recommended that the cabinet not be placed directly in front of radiators, heating elements, or air conditioner ducts. The temperature and humidity extremes surrounding these ducts can cause short cycling of the system.
- 3. As with any piece of fine furniture, please keep your cabinet out of direct ultra-violet light, as this may alter the finish over time. This is especially critical for this piece because of the clear varnish finish and the combination of wood species used in its construction.
- 4. Remove all packing material from reservoir area in the bottom, left of the cabinet interior. Also, check to see that the white mesh wicking filters are sitting upright in the water reservoir area.
- 5. Before you plug the cabinet into a surge protector, partially open the door, leaving the cabinet at room temperature for approximately one hour. This allows the interior of the cabinet to acclimate to your room environment prior to operation.

Vigilant Sentinel 250 Wall Humidor

Installation Instructions

1. Measure the cabinet, and roughly locate where you would like to hang the cabinet, before marking the wall.




- 2. Measure up from the floor 69" and gently mark the wall with a pencil.
- 3. Use the level to determine a level line at 69" above finished floor and gently mark the wall.

Note: This is the line that the bottom edge of the wall mounted z-clips will be placed. This will also result in the bottom of the humidor being +/- 36" off the finished floor.




4. In the desired wall area you will be hanging the humidor use a stud finder to determine stud locations and mark the wall accordingly below the prior marked 69" line.

Note: Vigilant recommends that at least one z-clip be mounted at a stud location for maximum weight support and that both wall mounted z-clips be located minimally 12" apart and no greater than 22" apart with the center of the cabinet being approximately located between the z-clips.

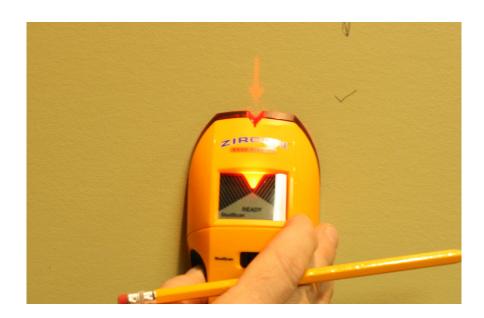


5. Locate z-clip and hold it in place against the wall so that the bottom edge is aligned with the 69" line. Mark the holes of the z-clip with a pencil.

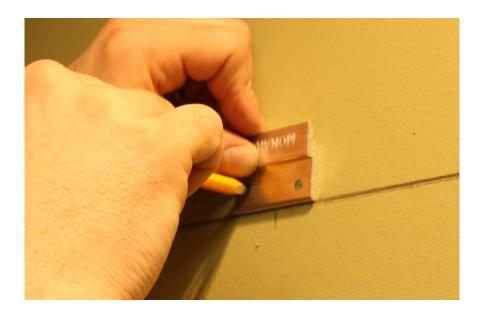

6. Determine which of the two holes will land on the stud. The one that is not landing on the stud will need to be drilled out to accept a supplied wall anchor.





7. Using a ½" drill bit and electric drill, gently drill a hole where the wall anchor will be needed. **Note:** The z-clip that mounts to a stud will have one screw and one wall anchor.

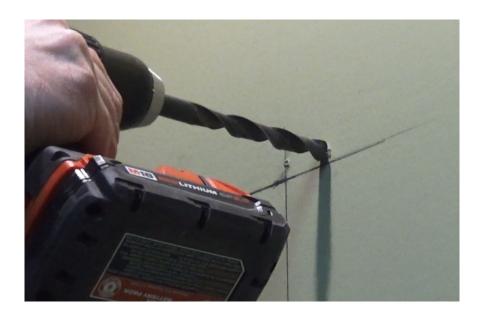


8. Locate the supplied wall anchors and insert and secure one into the hole.




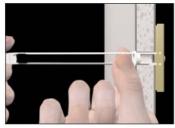

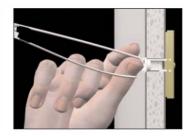

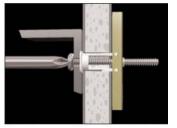

9. Once secured, locate the z-clip and fasten to the wall using a #8 construction screw and supplied wall anchor screw. We recommend hand tightening the wall anchor screw to ensure it is secured properly.

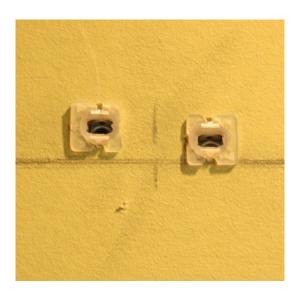



- 10. Locate second z-clip and repeat steps 5 9. Make sure all z-clips are securely fastened.
- 12. Before hanging the humidor locate the system power supply and connect it to the feed coming from the cabinet.



13. With the help of a second individual hold the humidor against the wall above where the clips will want to engage and let the humidor gently slide down the wall until the z-clips attach together.






14. Congratulations you have successfully installed your Vigilant Sentinel 250 Wall Humidor. Using the supplied shelf pins you can add in the shelves at your desired height locations.





Setting-up Your Humidification System

- 1. Locate the black plastic water reservoir positioned in the center of the opening. Remove all packing materials from around the reservoir.
- 2. Carefully fill the reservoir with 1.5 quarts of distilled water. USE ONLY DISTILLED WATER. DO NOT FILL PAST THE MAX FILL LINE.
- 3. Treat the water with Baceteriostat to keep the reservoir clear of bacteria.

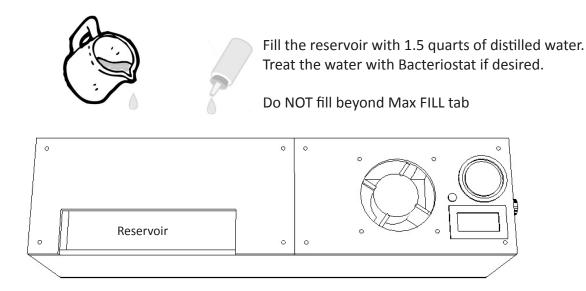

4. Check to make sure that the white mesh wicking filters are positioned vertically in the slots in the reservoir. They should protrude about an inch above the top edge of the reservoir.

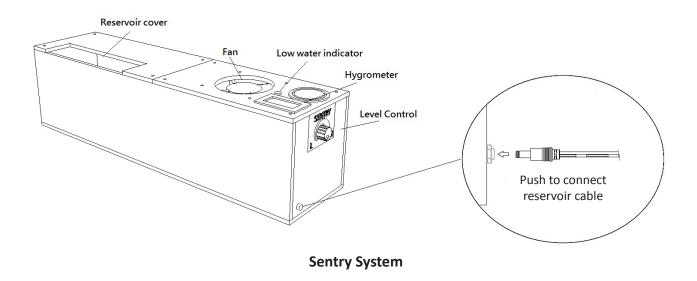

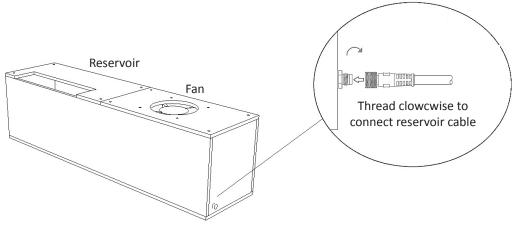

Guardian System

Note: Step 5 applies to Guardian Systems only.

5. The humidor is ready for operation, simply plug the unit into a grounded outlet. The control panel will run through its stabilization mode and the fans will begin to operate after 10 minutes. You will see one digital readout of the humidity. Initial readings are meaningless as the cabinet has not been operating since it left the Vigilant testing facility.

Operating Your Sentry System

The Sentry Humidification System controls the humidity level of your Wall Humidor cabinet using a manual knob. **Note:** This is our standard system.

- 1. Allow the Sentry System to operate at the pre-set level for at least 24 hours before adding cigars to your cabinet. The initial digital reading will be much lower than 70%, but will rise upon starting the system.
- 2. The system will consume large quantities of water during the seasoning stage of 3 to 4 days. Therefore, it is important to keep the reservoir filled at all times.
- 3. The Sentry Humidification System requires that you adjust the humidity level in response to the independent LCD hygrometer. Close your cabinet's door and allow the system to run for several hours. When the fan stops running, the system has reached the set-point level and you should now note the humidity reading on the hygrometer.

Adjusting the Set Point

- 4. With the knob in the lowest setting, turn slowly clockwise to increase set point.
- 5. Stop turning once the fans turn. The system is now set to the current Relative Humidity.
- 6. Turn the knob in smaller increments to gradually increase the Relative Humidity and wait.

Note: Once set the system will not need adjustment and will maintain a Relative Humidity within +/- 5% of your set point.



Operating Your Guardian System

The Guardian Humidification System is our state-of-the-art digitally controlled humidification system with a push button control panel. This precise system includes a time-to-fill indicator and a remote electronic sensor keeping the humidity accurate to +/- 2%. **Note:** This a system upgrade that does not come standard.



Note: The dehumidifier is optional equipment

Power Up/ Stabilization Mode

2. The system sensor requires a stabilization period of up to 30 minutes after powering on and will default to stabilization mode. This mode will delay operation for 10 minutes and the fan will be off. During this time, the green display will flash STB and the current sensor reading. Initially the sensor will read close to zero but after around 15 seconds the sensor output will begin to increase. The final stabilization is required when the ambient parameter is near full scale. Typically no longer than 30 minutes.



Indicator key

- △ Low Water
- **&** Humidifier Active
- **∂** Dehumidifier Active
- SP Displaying Current Set Point
- ((●)) Alarm
- Menu Access
- Raise
- Lower



Adjusting the Set Point

To view the current set point simply press the menu access button. To adjust the set point use either the up or down arrow buttons until you hit your desired humidity level.

Note: The adjustability range for this cigar humidor is 60-80% RH. Our factory set point is 67% RH.

Alarms

- 4. The humidification system features a visual alarm indicator. The indicator will illuminate red if the Relative Humidity is too low or too high and will clear once the unit returns to the normal operating range.
 - High Alarm ≥ 78%
 - Low Alarm ≤ 62%



LED Lighting

The Wall Humidor comes with a dimming LED display lighting. For convenience, it comes with an easy to use touch control.

Touch once to turn on/off



Touch and hold to adjust brightness



Maintenance

Your Wall Humidor is more than just a cigar humidor; it is a fine piece of handcrafted furniture. Regularly dust the exterior of the cabinet with a soft cloth that has been lightly sprayed with a product like Endust. Please do not spray your cabinet directly with furniture polish.

When the red LED indicator light is on, the water reservoir is below one third full. Frequency of filling will vary according to climatic conditions (between 20 and 40 days).

Seasoning Your Wall Humidor

Your Wall Humidor's interior is made of natural, untreated Spanish Cedar and Mahogany. When delivered to you, the moisture content of this wood interior is equal to the humidity in the air. To accelerate the seasoning of the interior, it may be necessary to rub the shelves and cabinet interior with distilled water prior to the start up period. Do not worry about staining the wood. Proper application will temporarily raise the grain on the Spanish Cedar. If you wish to accelerate the seasoning process follow these simple instructions.

After following the operating instructions in your Owner's Manual, locate a terry cloth towel or wash cloth, preferably no larger than 8" x 8". Soak the cloth in distilled water and wring it out so that no water is dripping from it.

Start by wiping down each of the Spanish Cedar shelves with the damp cloth. Wipe each shelf so that the water visibly soaks into the wood. Then do the same on the interior of the cabinet. Do not leave droplets of water sitting on the wood. Make sure that there is no water residue on the cabinet exterior. You will immediately see the humidity level of your cabinet increase and it may temporarily surpass the factory set point of 68% Relative Humidity. This may shut down active humidification for a short period until the humidity level falls back below the set point. This is perfectly normal. Make sure that the water reservoir is filled and allow the cabinet to "rest" for 36 hours prior to filling it with cigars.

Cleaning the Reservoir and Wick

As the reservoir and wick are constantly exposed to moisture, they must be cleaned periodically (approximately every 90 days). The wick will collect dirt from the circulating air and may have to be replaced at this time. Contact the Vigilant Parts Department at 888-812-4427 for wick re-fills.

- 1. Check the reservoir and wick every 90 days.
- If the wick is brown or the sides of the reservoir have bacterial build-up on them, you will want to remove the reservoir from the cabinet for cleaning. Soiled reservoirs will impede proper evaporation and may create low humidity conditions.
- 3. Unplug the reservoir lead wire located on the top/right ceiling of the reservoir area and carefully slide it out into the cabinet area.
- 4. Rinse the reservoir and wick thoroughly with soap and hot water. DO NOT USE BLEACH. Wipe down the entire reservoir with a dry paper towel. If the wick does not wash clean, it should be replaced. Wicks should be replaced every 90-120 days and can be ordered directly from Vigilant.
- 5. Insert the wick into the reservoir and fill with distilled water up to one inch from the top edge.
- 6. Place the reservoir back into the reservoir area and plug the float switch lead back into the receptacle.

Troubleshooting

Wall Humidor not powering on:

- 1. Check the power to your power outlet. Plug a light that you know operates properly into the outlet. If the outlet works properly, move to the next step.
- 2. Check your fuse or breaker box for the circuit controlling the outlet. If the circuit is breached, the fuse or breaker may have to be exchanged for higher amperage. The Wall Humidor requires .6 amps at peak operating levels.

Trouble with humidity level:

- 1. Unit is still brand new and will need to run longer to season interior cabinet.
- 2. Reservoir is empty. If red LED indicator lit up, remove the reservoir and check the water level in the reservoir. Fill immediately.
- 3. Make sure fans and airflow intakes on each side of the reservoir are clear of any obstructions that can impede air circulation.
- 4. Make sure humidity wicks are vertically positioned at least one inch above the reservoir opening.

NOTE: Replacement humidification wicks are available directly through Vigilant Inc.

Cigars are too moist or too dry:

Your humidity set point is too high or too low. Remember that the Relative Humidity is +/- 2% for Guardian System and +/- 5% for the Sentry Systems from the number you set on the display for your average humidity level, adjust accordingly.

Cigars in bottom are too dry:

Make sure the humidity fan is clear of any obstructions that can impede air circulation. Check your set point adjustment on the controller on the bottom of the unit.

Humidity fan does not work:

Check the humidity set point. If set point is below the humidity level of cabinet interior, the fan will not run.

If the above troubleshooting recommendations do not correct the issue please call Vigilant at 1-888-812-4427 and our team of experts would be happy to assist you.

Guarantee

Vigilant's 30-Day Unconditional Product Guarantee

Vigilant's philosophy has always been to manufacture the highest quality crafted products. We believe that our products achieve a level of satisfaction for our customers that no other product can. Of course we want you, our customer, to be the final judge of this. For your protection, we have a 100% unconditional guarantee on our standard products.*

If for any reason you are not satisfied with your Vigilant purchase within the first 30 days of receiving it, return it to Vigilant in original condition and original packaging and be issued a full refund, less inbound and outbound freight. If you prefer, you may request a replacement product instead of a refund. We don't want you to have a Vigilant product that you are not proud to own.

*Standard products covered under this guarantee do not include: custom designed or fabricated cabinetry or racking manufactured with custom woods and/or finishes; pre-hung entry doors; or custom-designed components or cabinets.

Warranty

Vigilant Limited Two-Year Electronics Warranty

Upon registering your product with Vigilant, your Vigilant electronics are covered under our limited two-year warranty. All Vigilant electronic products are guaranteed to be free from defects in materials and/or workmanship for up to two years from date of purchase. Vigilant, at its sole discretion, may repair or replace defective components or products within this two-year period.

Any and all component(s) determined to be defective by Vigilant, must be returned at the owner's expense to Vigilant along with a copy of the original sales receipt.

Conditions to Vigilant's Limited Two-Year Electronic Warranty

Vigilant will not be held responsible for damage incurred during a product's return as a result of improper packaging. It is strongly suggested that all original packaging material from Vigilant be retained for returns. Vigilant will not be held responsible for any damage to property that results from the failure of a Vigilant product or product component if not packaged and returned properly.

Vigilant's warranty does not pertain to any customer-applied finishes, or any damage caused by neglect, abuse, misuse, improper operation, or unforeseen circumstances.

Vigilant's warranty is considered null and void if the online warranty registration is not completed within 60 days of receipt of your product.

Vigilant's warranty is non-transferable, and is valid for the original owner only.

Vigilant is a reseller for many fine products within the industry. Products that are resold by Vigilant carry the original manufacturer's warranty.

Vigilant Limited Lifetime Wood Products Warranty

Upon registering your warranty with Vigilant, your Vigilant wood products are covered under our limited lifetime warranty.

All Vigilant wood products are guaranteed to be free from defects in materials and/or workmanship under normal use for the life of the product under original ownership. Vigilant may, at its sole discretion, repair or replace a defective component or product free of charge.

Any and all component(s) determined to be defective by Vigilant, must be returned at the owner's expense to Vigilant along with a copy of the original sales receipt.

This warranty applies only to Vigilant standard wood products. Electronic components are not covered by this warranty.

Conditions to Vigilant's Limited Lifetime Warranty

Vigilant will not be held responsible for damage incurred during a product's return as a result of improper packaging. It is strongly suggested that all original packaging material from Vigilant be retained for returns. Vigilant will not be held responsible for any damage to property that results from the failure of a Vigilant product or product component if not packaged and returned properly.

Vigilant's warranty does not pertain to any customer-applied finishes, or any damage caused by neglect, abuse, misuse, improper operation, or acts of God.

Vigilant's warranty is considered null and void if submittal of your warranty registration online is not completed within 60 days from receipt of your product.

Vigilant's warranty is non-transferable, and is valid for the original owner only.

Please contact Vigilant at 888-812-4427 if you have any questions about your warranty.

Vigilant is a reseller for many fine products within the industry. Products that are resold by Vigilant carry the original manufacturer's warranty.

Wood Color Disclaimer

The photos of our wood finish options on our website and in printed catalogs are to be used for general reference of color and are not exact representations of the specific wood species and finishes used on our products. We cannot guarantee that your final product will be an exact match to the colors represented on our website or in printed materials. It is recommended that you request a sample of the finished wood from us for review and approval.

Vigilant Inc.

85 Industrial Park Drive Dover, NH 03820 Toll Free: 888-812-4427 Phone 603-285-0400 | Fax 603-285-0420 Vigilantinc.com

Copyright © 2018 by Vigilant Inc. All rights reserved.